



The image shows a close-up of the Electrolux C40 Degreaser, a professional-grade stainless steel machine. It features a large, perforated metal tray at the top, a control panel with two blue rotary knobs and a black push-button, and a lower section with a perforated metal tray. The Electrolux logo is visible on the front panel.

## C40 Degreaser for hot surfaces at high temperatures

**Accessories & Consumables**  
To make our customers'  
work-life easier and more  
profitable

Make your work simple and your equipment last longer with original Accessories&Consumables. To guarantee the best performance and boosting the highest profitability.

## C40 Degreaser for hot surfaces

The ideal cleaning solution for cooking surfaces at high temperatures.

Recommended for fry tops, braising pans and multifunctional cookers.

Total food safety.

Ideal for intermediate cleaning and quickly when preparing different types of food i.e. fish, meat and vegetables.

- ▶ Quick cleaning without needing to first cool down the equipment
- ▶ Thorough removal of stubborn food residues
- ▶ Also available as **complete cleaning kit**



Code	Description
0S1841	C40 Degreaser for hot surfaces 1 pack of 6x1 liter bottle
0S1379	Cleaner brush with handle for hot surfaces
0S1377	Squeegee with handle for hot surfaces
055995	Scraper for smooth cooking plate



Follow the cleaning path with Electrolux.

To find out more, visit us at [professional.electrolux.com/customer-care/](http://professional.electrolux.com/customer-care/)

