

Tumble Dryer


instructions



1 Select temperature



High temperature

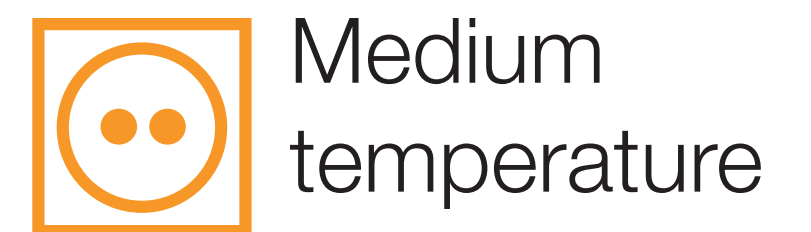

Medium temperature




Low temperature



No heating

2 Follow the instructions for payment

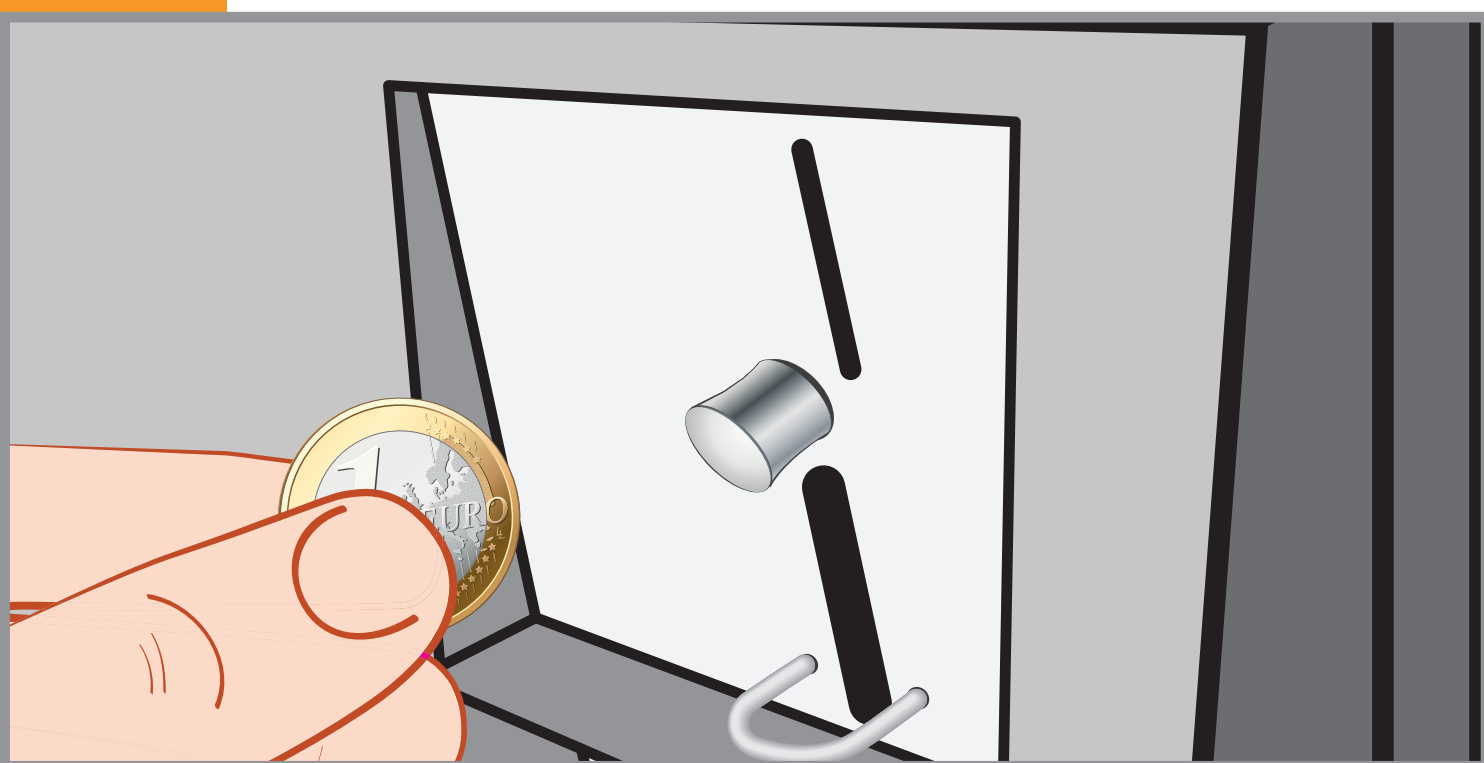

3 Once the right amount is paid, the machine will automatically start (or can be started by pressing the button)



ELECTROLUX
EMPOWERED