 



Washer instructions

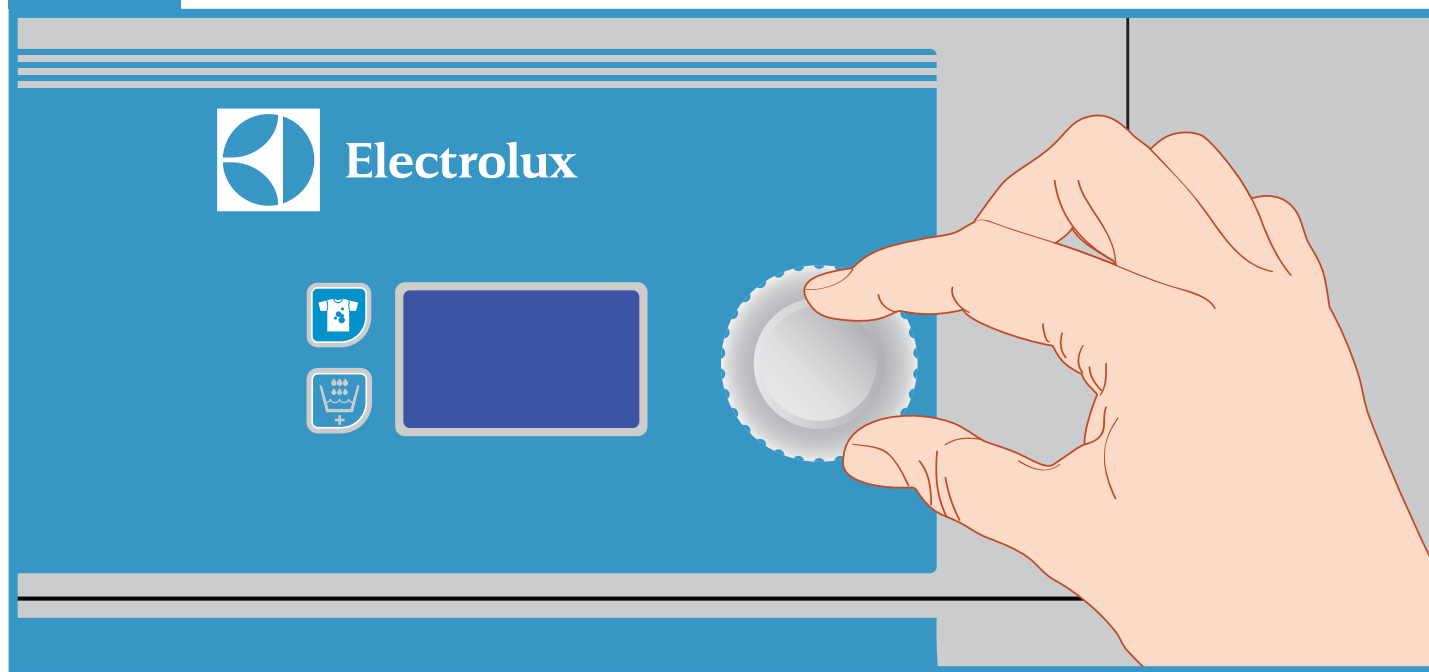

1 Turn the knob to select a program



 2 Select an option as needed

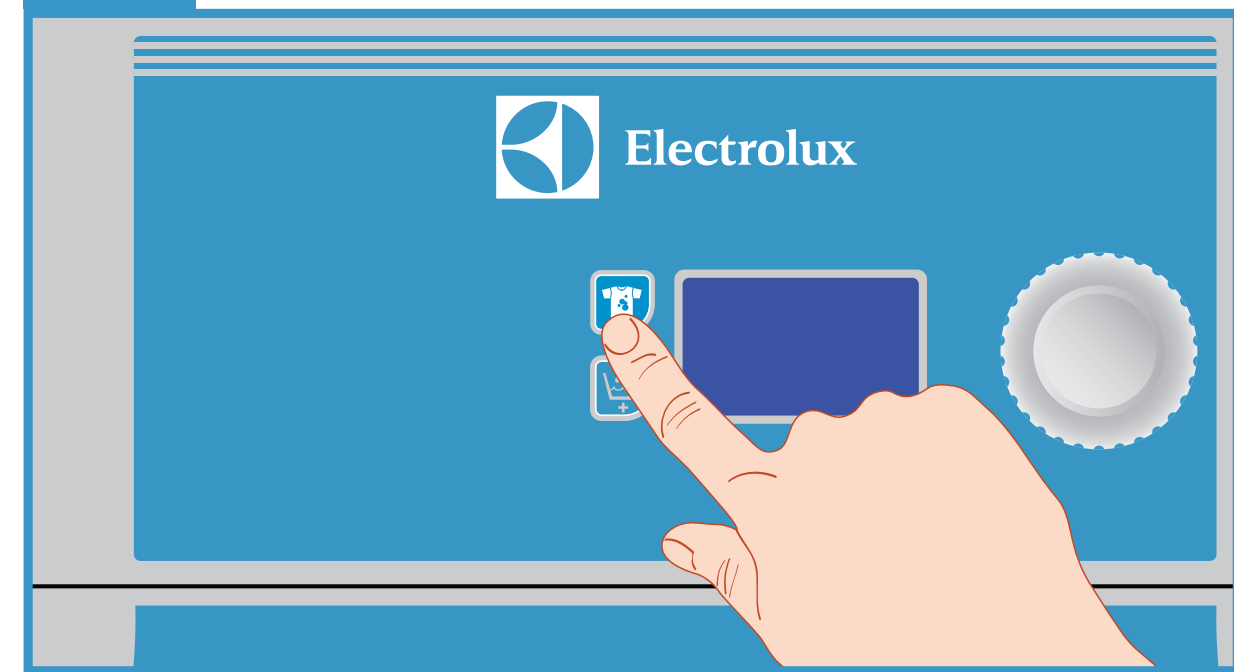


Heavy soil
For heavily soiled textiles
Long wash time




Extra rinse
one rinse added

 3 Follow the instructions for payment


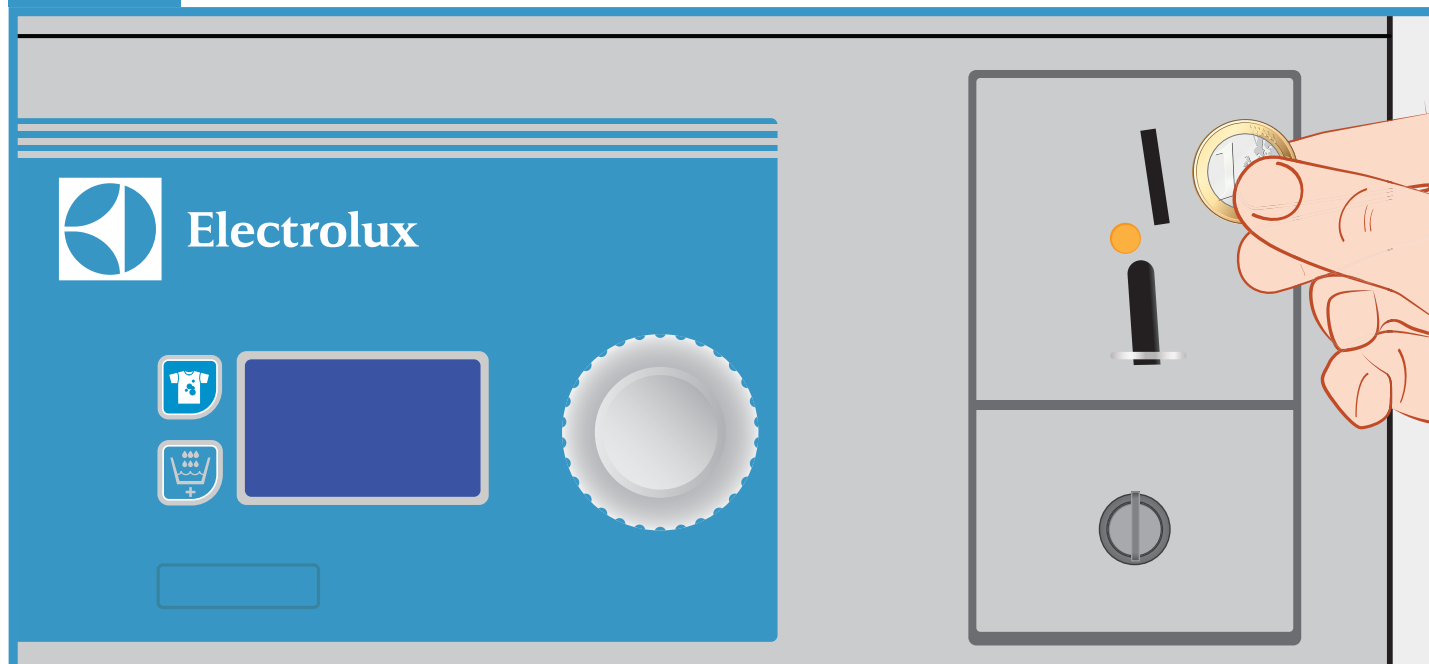


 4 Once the right amount is paid, the machine will automatically start (or can be started by pressing the knob)

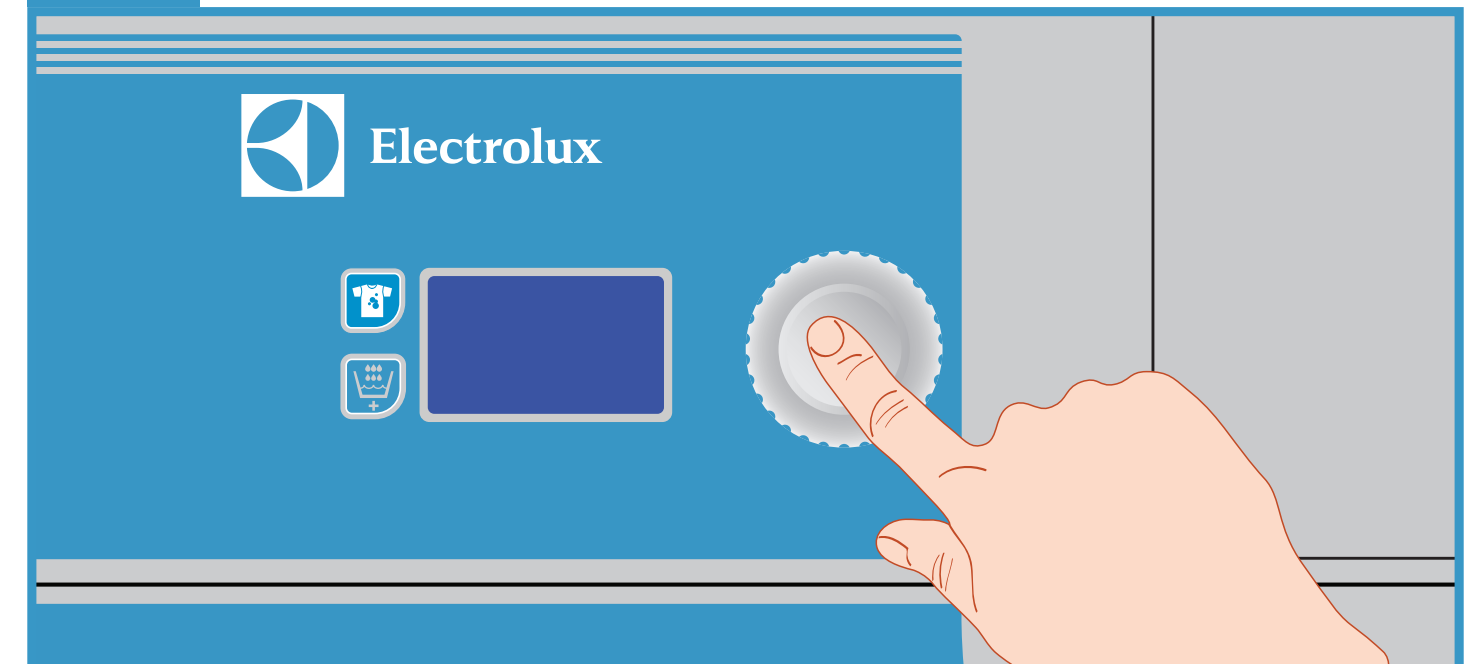

Dosage:

  Dispense the detergent according to the instructions on the detergent package

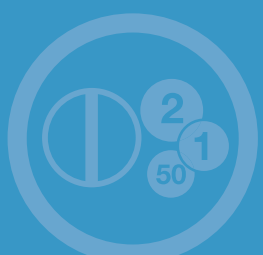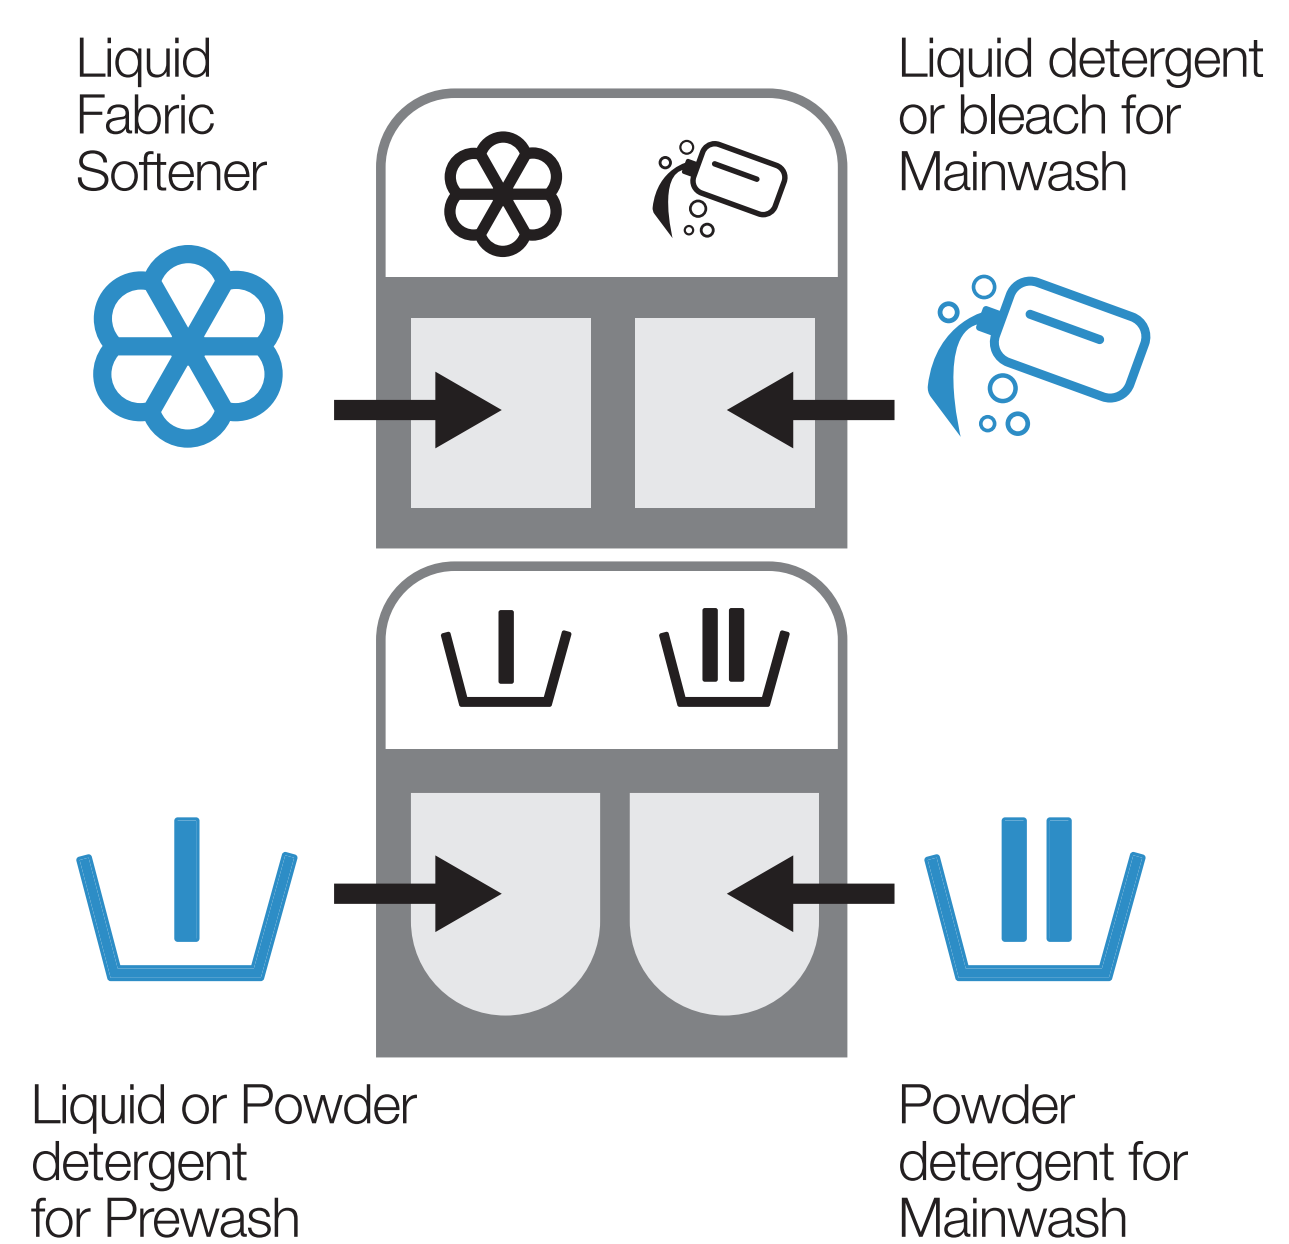

Coin-op Laundry



ELECTROLUX
EMPOWERED