 



Washer instructions

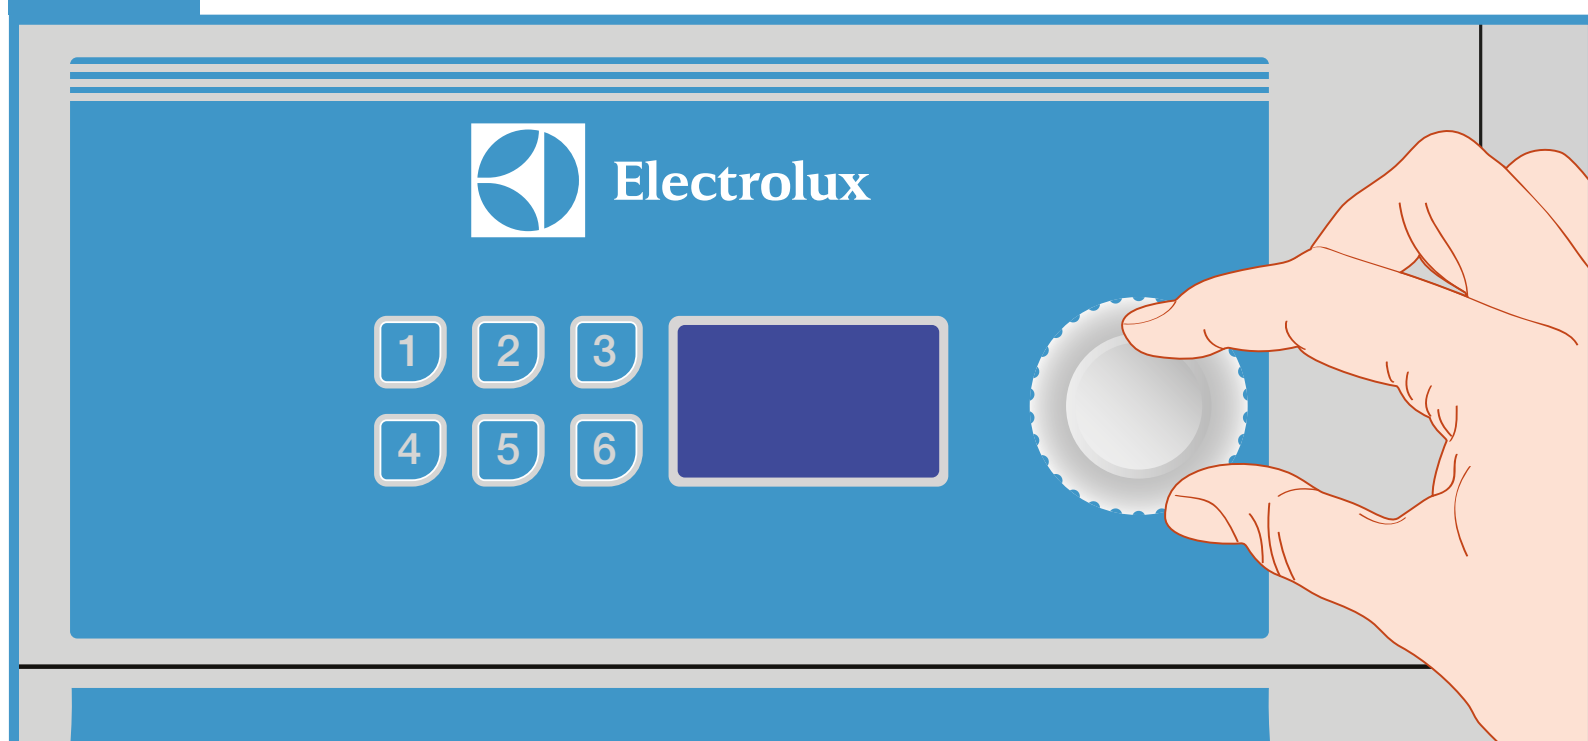


1 Turn the knob to select a program



 2 Select an option as needed

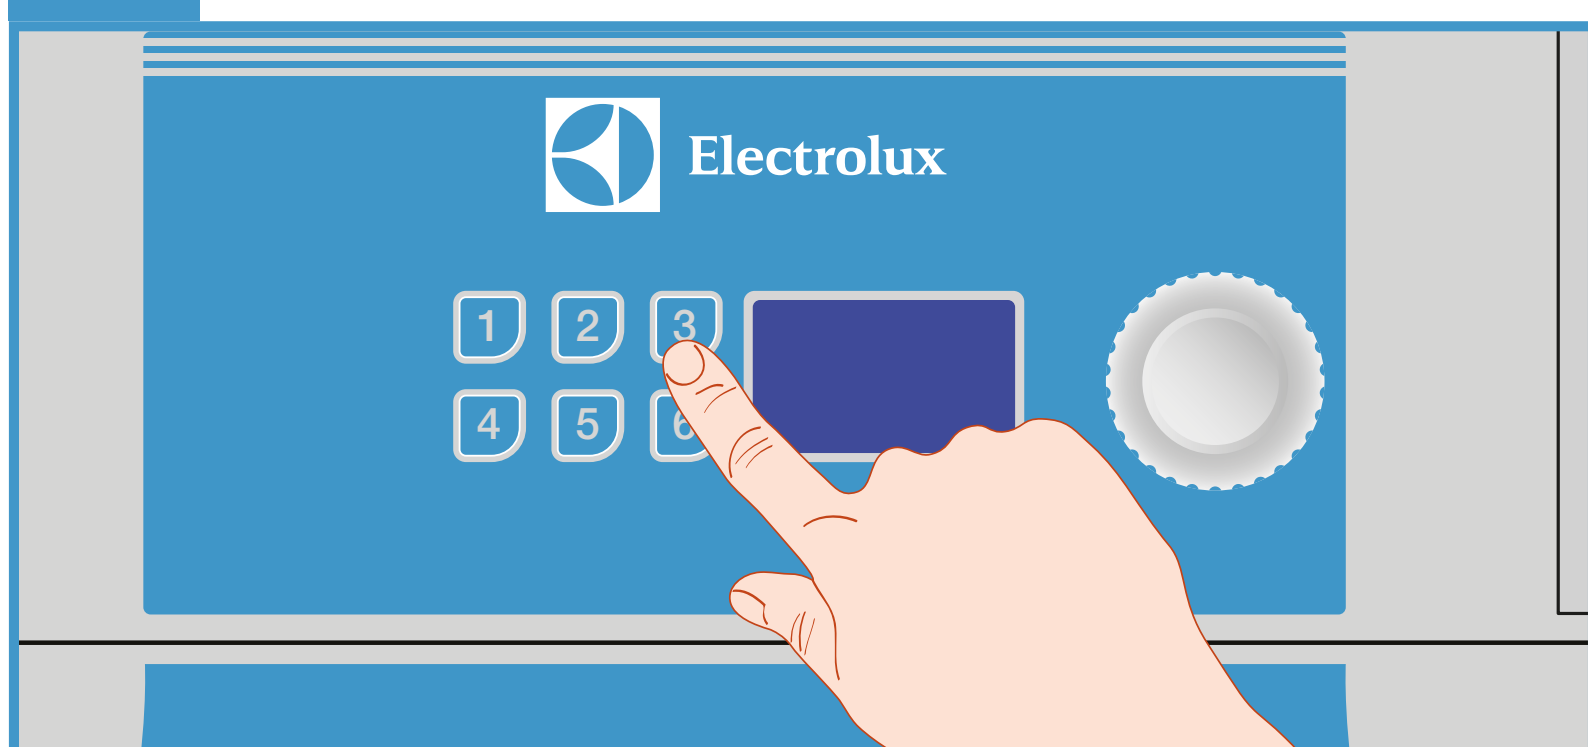

3 Press the knob to start

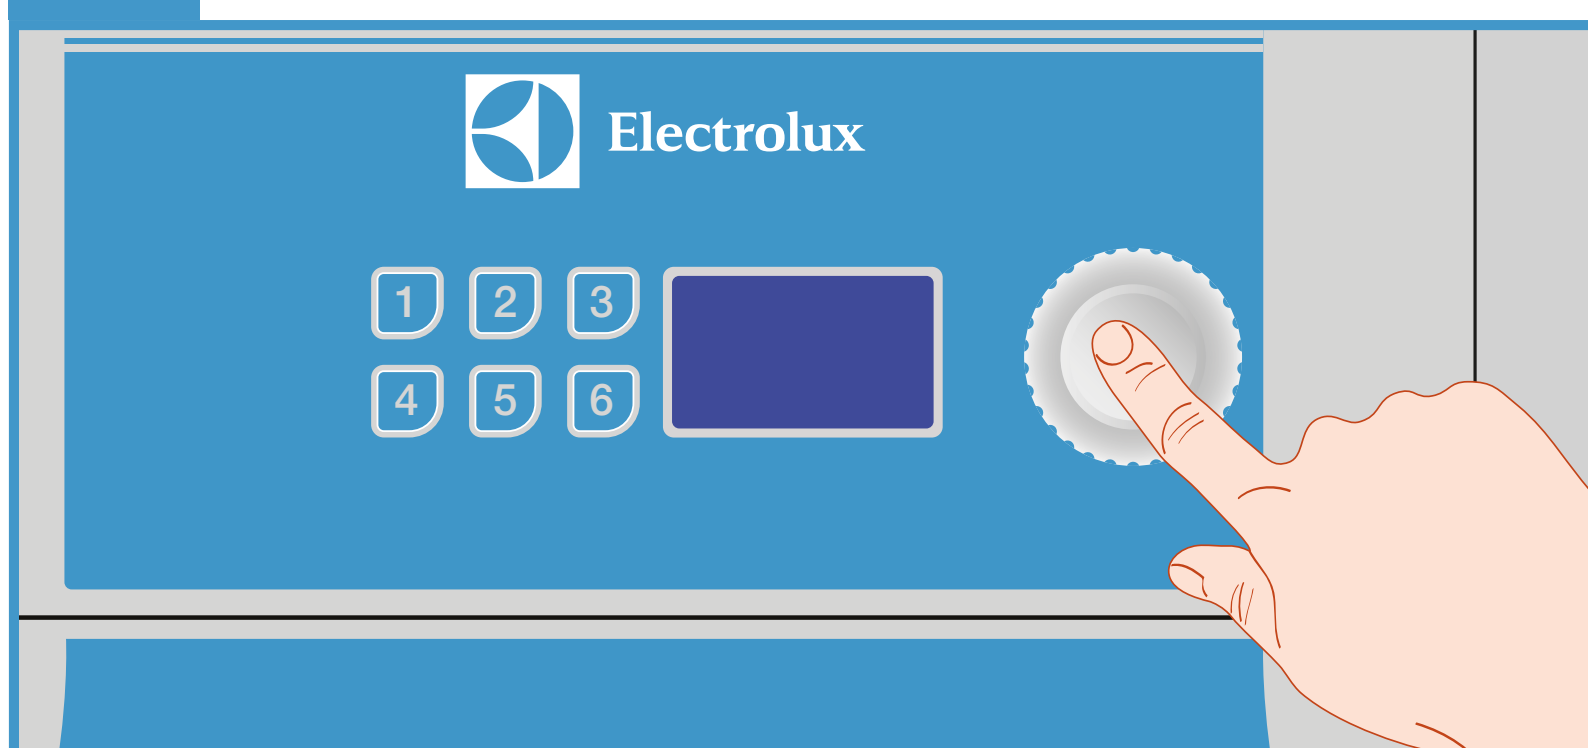 

- | | | | |
|----------|--------------------|----------|--------------------|
| 1 | Option/program | 4 | 15 sec. extraction |
| 2 | Option/program | 5 | 30 sec. extraction |
| 3 | 10 sec. extraction | 6 | 45 sec. extraction |

If you need to pause the program

Press the knob. A menu with PAUSE highlighted will be shown on the display. Press again to pause the wash program.

The door can be opened after a while unless the water level is too high. Close the door and press the knob to continue the wash program.

When “maintenance” is displayed

Inform the person in charge of maintenance.

The machine can still be used

**Once you have finished washing:
leave the door open**



Facility Management
Laundry

